


# Bouton haut flèche standard


# STÖCKLI

Fixation par pince


Fixation par vis

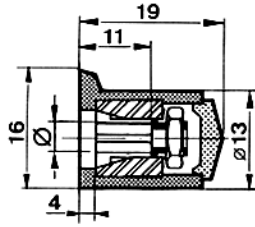


Ø	REFERENCE
3	300-23-30
4	300-23-40
5	300-23-50
6	300-23-60
1/8"	300-23-10
1/4"	300-23-20

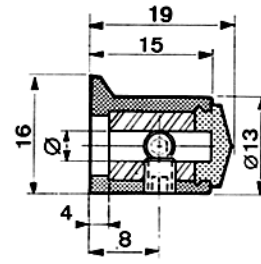


Ø	REFERENCE
3	100-23-30
4	100-23-40
6	100-23-60
1/8"	100-23-10
1/4"	100-23-20

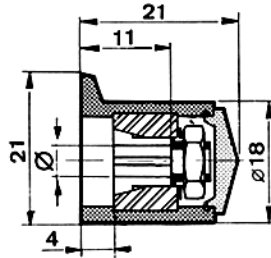


Ø	REFERENCE
3	300-24-30
4	300-24-40
5	300-24-50
6	300-24-60
1/8"	300-24-10
1/4"	300-24-20

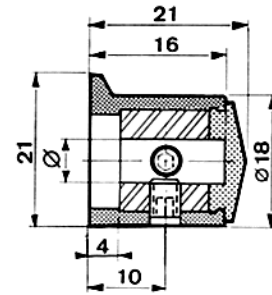


Ø	REFERENCE
3	100-24-30
4	100-24-40
6	100-24-60
1/8"	100-24-10
1/4"	100-24-20

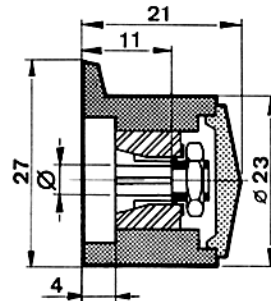


Ø	REFERENCE
3	300-25-30
4	300-25-40
5	300-25-50
6	300-25-60
1/8"	300-25-10
1/4"	300-25-20

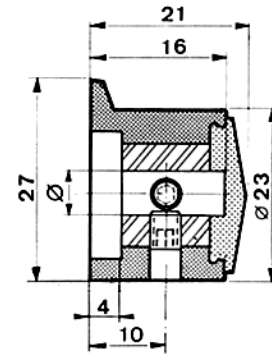



Ø	REFERENCE
4	100-25-40
6	100-25-60
1/4"	100-25-20

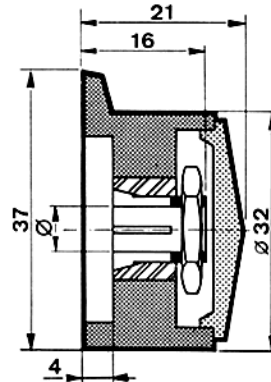

Ø	REFERENCE
4	300-26-40
5	300-26-50
6	300-26-60
1/4"	300-26-20

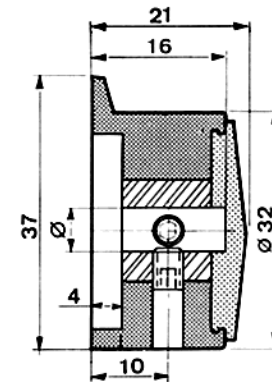

Ø	REFERENCE
4	100-26-40
6	100-26-60
8	100-26-80
10	100-26-00
1/4"	100-26-20
3/8"	100-26-90

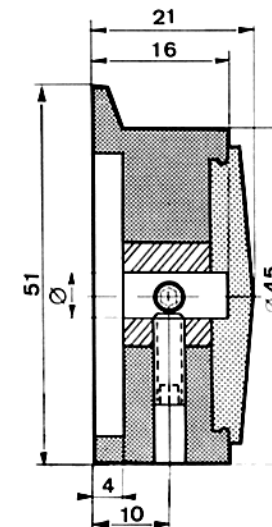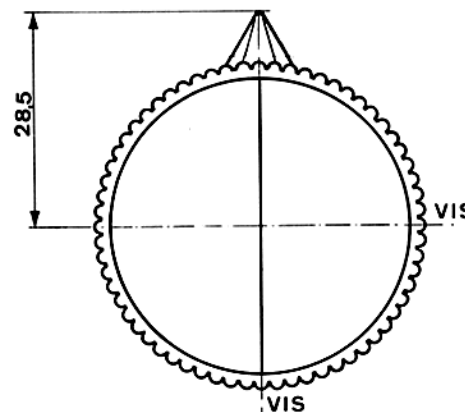

Ø	REFERENCE
4	100-27-40
6	100-27-60
8	100-27-80
10	100-27-00
1/4"	100-27-20
3/8"	100-27-90

Voir page 21 pour les astérisques