


Bouton bas papillon standard


STÖCKLI

Fixation par pince


Fixation par vis

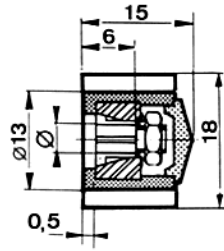


Ø	REFERENCE
3	301-53-30
4	301-53-40
5	301-53-50
6	301-53-60
1/8"	301-53-10
1/4"	301-53-20

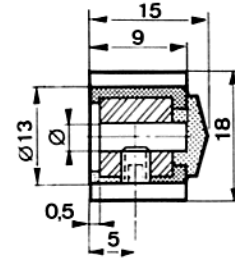


Ø	REFERENCE
3	101-53-30
4	101-53-40
6	101-53-60
1/8"	101-53-10
1/4"	101-53-20

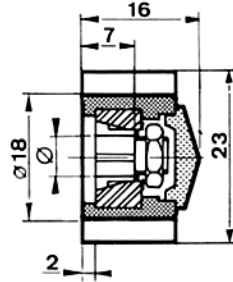


Ø	REFERENCE
3	301-54-30
4	301-54-40
5	301-54-50
6	301-54-60
1/8"	301-54-10
1/4"	301-54-20

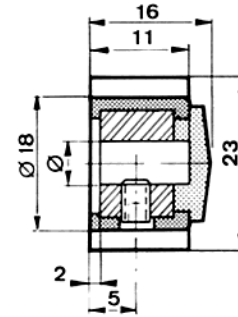

Ø	REFERENCE
3	101-54-30
4	101-54-40
6	101-54-60
1/8"	101-54-10
1/4"	101-54-20


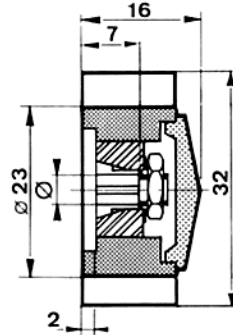


Ø	REFERENCE
3	301-55-30
4	301-55-40
5	301-55-50
6	301-55-60
1/8"	301-55-10
1/4"	301-55-20


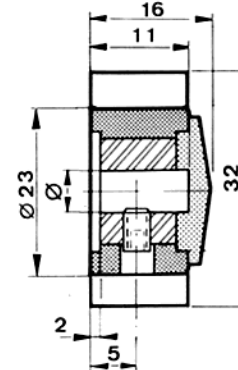


Ø	REFERENCE
4	101-55-40
6	101-55-60
1/4"	101-55-20

A vis seulement

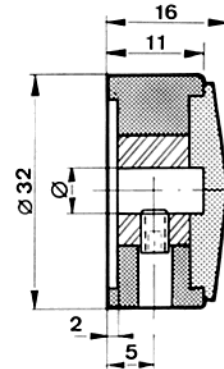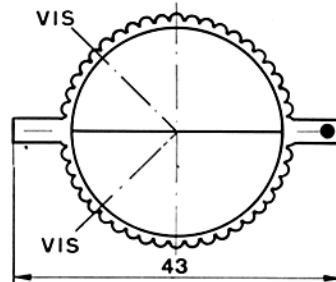

Ø	REFERENCE
4	101-56-40
6	101-56-60
8	101-56-80
10	101-56-00
1/4"	101-56-20
3/8"	101-56-90

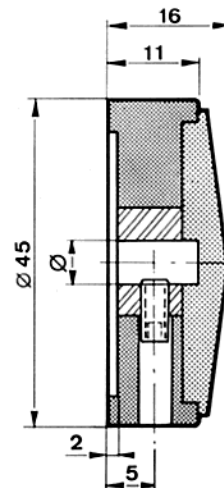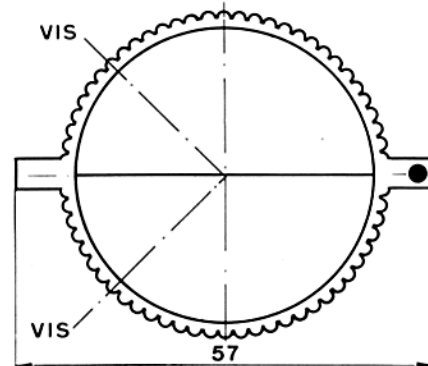

Ø	REFERENCE
4	101-57-40
6	101-57-60
8	101-57-80
10	101-57-00
1/4"	101-57-20
3/8"	101-57-90

Voir page 21 pour les astérisques