
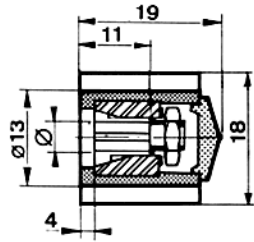


# Bouton haut papillon standard


# STÖCKLI

Fixation par pince


Fixation par vis

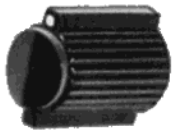


Ø	REFERENCE
3	300-53-30
4	300-53-40
5	300-53-50
6	300-53-60
1/8"	300-53-10
1/4"	300-53-20

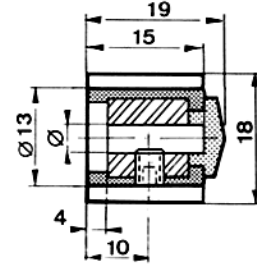


Ø	REFERENCE
3	100-53-30
4	100-53-40
6	100-53-60
1/8"	100-53-10
1/4"	100-53-20

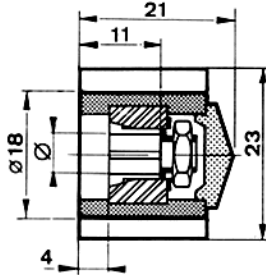


Ø	REFERENCE
3	300-54-30
4	300-54-40
5	300-54-50
6	300-54-60
1/8"	300-54-10
1/4"	300-54-20

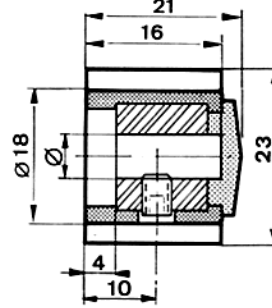



Ø	REFERENCE
3	100-54-30
4	100-54-40
6	100-54-60
1/8"	100-54-10
1/4"	100-54-20

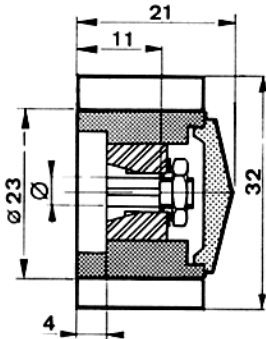


Ø	REFERENCE
3	300-55-30
4	300-55-40
5	300-55-50
6	300-55-60
1/8"	300-55-10
1/4"	300-55-20

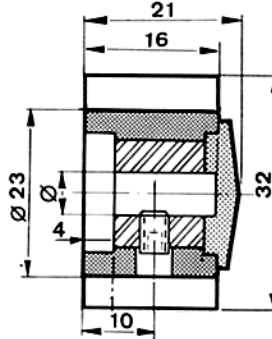



Ø	REFERENCE
4	100-55-40
6	100-55-60
10	
1/4"	100-55-20

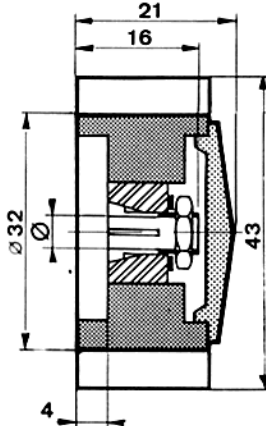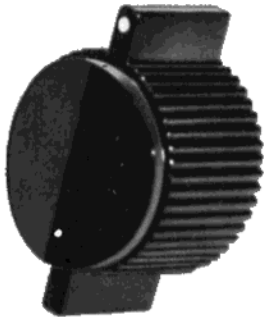

Ø	REFERENCE
4	300-56-40
5	300-56-50
6	300-56-60
1/4"	300-56-20

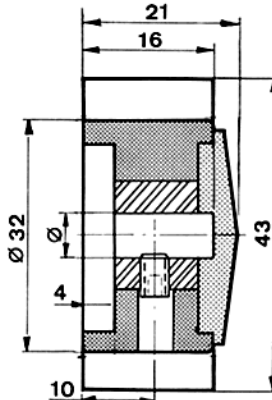

Ø	REFERENCE
4	100-56-40
6	100-56-60
8	100-56-80
10	100-56-00
1/4"	100-56-20
3/8"	100-56-90

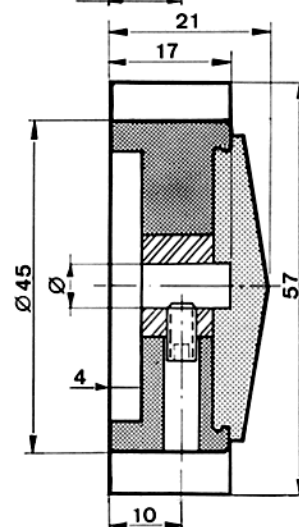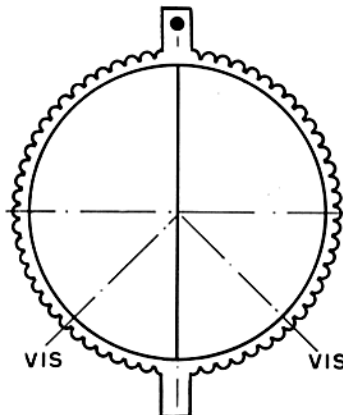

Ø	REFERENCE
4	100-57-40
6	100-57-60
8	100-57-80
10	100-57-00
1/4"	100-57-20
3/8"	100-57-90

Voir page 21 pour les astérisques